



## Installation instructions for Nelson-Rigg® Saddlebags CL-850,900,950,1000 SSC-140 & 150


Read instructions carefully before installation. If you have any questions or something is unclear, please contact us or your dealer for clarification. Make sure your motorcycle is clean and free from dirt, road grime etc. where the Nelson-Rigg® luggage mounts.

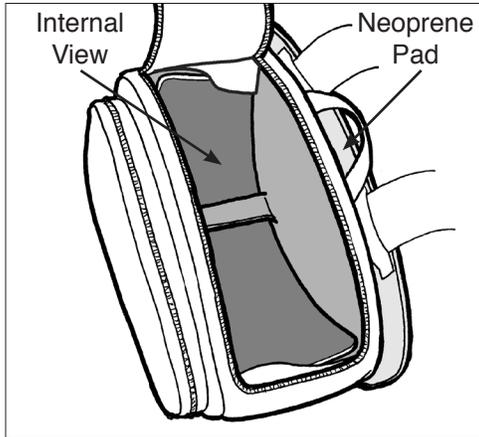


Insert the plastic Saddlebag stiffener under the loop in the base of the bag. Tuck the two top edges under the "pockets" just inside of the opening. Stiffener may seem long, just push stiffener into bottom of bag

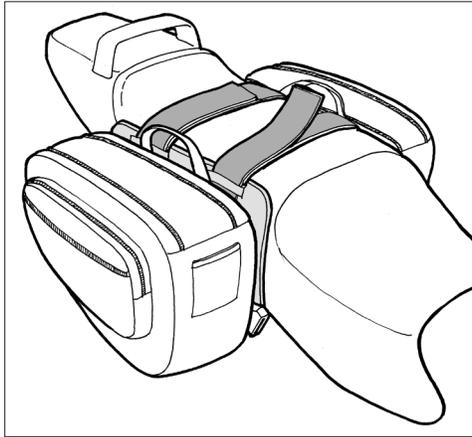


Connect Velcro® straps on each bag together as shown and position over, or if your bike allows, under the seat. Adjust these straps to determine the height of the bags. Further adjustment may be necessary once bags are loaded to ensure they do not come into contact with your exhaust (see diagram below) or moving bike part.

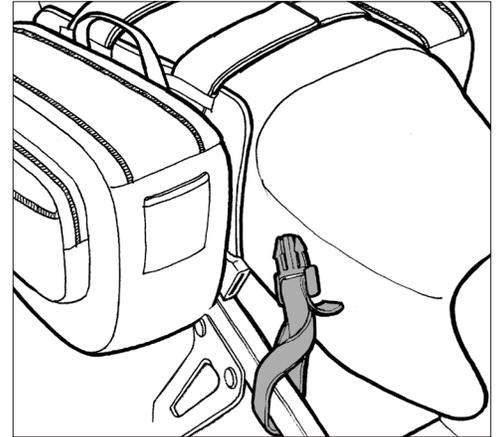


Using the strap with buckle on one side and loop on the opposite side, hook it or loop it around the frame, foot peg or secure body part and then back into the clip on the bag. It might be necessary to pass the buckle through the loop creating a noose to attach it around the frame or secure body part.

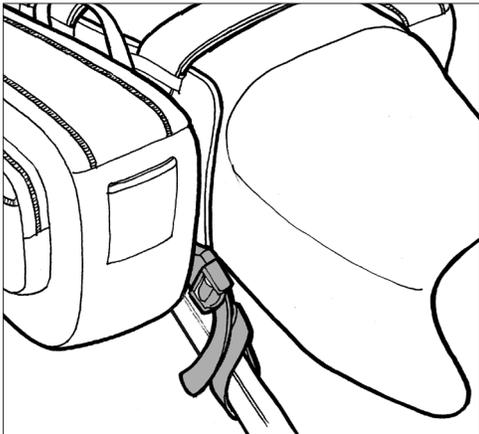

Re-attach strap to bag and adjust to fit. This strap does not need to be overtightened as the side straps mainly hold the bags against the bike only and when installed correctly, do not come under heavy load.

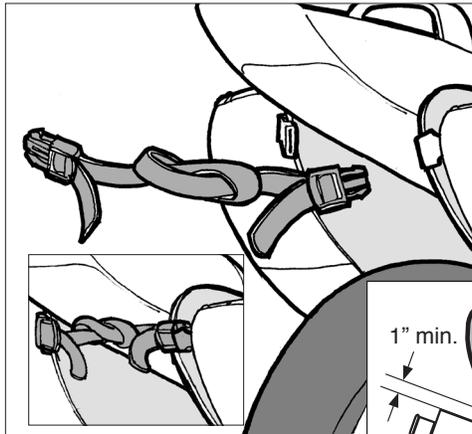

Depending on your bike's configuration, you may have to connect the two bags together with the side straps as shown. Position straps under the fender or licence plate bracket. Do not overtighten. Check the bags from the rear of bike to make sure they are not angled in or out. Bags should be as vertical as possible.

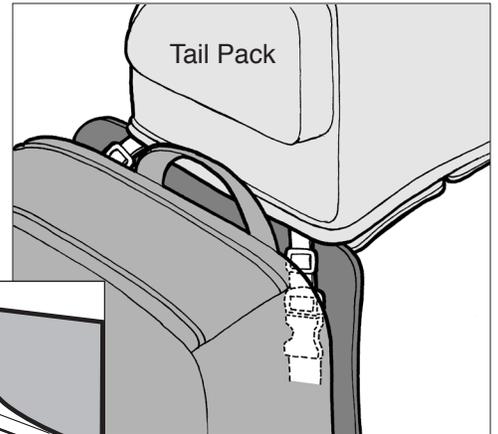

The saddlebags should be positioned with a minimum of 1" clearance above exhaust pipe (see diagram above/left). Although bottoms of bags have an aluminized heat shield, it will not protect from direct contact with your hot exhaust. When attaching bags to our Tail Pack utilize the buckle straps between the bags and neoprene pad.

### Warning:

Read the installation instructions and make yourself familiar with the process of installing the Nelson-Rigg® product(s) on your bike. It is your responsibility to mount the product correctly and securely as outlined in these instructions. Nelson-Rigg® products are intended for use at USA street legal speeds as posted by the individual States. Nelson-Rigg® luggage must not be overloaded. Max carrying capacity is 10 lbs per bag or the maximum load suggested by the manufacturer of the vehicle, whichever is less.

Failure to adhere to these warnings may result in, but not be limited to: the luggage becoming detached, the product becoming tangled in moving parts of the vehicle, unstable vehicle dynamics, reduction in the ability to control the vehicle. The result(s) could lead to serious injury.

**Always ride safely, adhering to the local highway regulations. Always wear a helmet and protective apparel.**

[www.nelsonrigg.com](http://www.nelsonrigg.com)

it's not just a bike®

**NELSON-RIGG**