



401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

2007-08 Honda CBR600RR
Fender Eliminator Kit
Fender Eliminator Kit
Part # 013-175



Parts List

Qty.	Description	Part Number
1	Bracket	005-17504B
1	Marker Light	005-88T2
1	Rubber Edge Trim	005-LB090
4	Zip Ties 4" x 5/8"	005-ZT458B
4	Four Way Zip Tie Mount	005-ZTM4
1	Two Brothers Racing Sticker Kit	005-10212
1	Rear Tail Light Assembly	005-17504LK

IMPORTANT - PLEASE READ CAREFULLY

We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a centerstand or ideally a service lift during installation. Be sure to save all stock components for possible use later.

Installation Instructions

1. Make sure the bike is completely cool before starting the installation. Make sure the bike is secure on the sidestand or ideally a rear service stand.
2. This product is designed to be used with the Two Brothers Racing slip-on exhaust for a 2007-08 CBR600RR and should be installed by a qualified mechanic.

3. Remove OEM fender and muffler covers. This will not be re-used.

Note: You will need to trim the OEM heatshield for turn signal clearance. Then re-install the heatshield.




4. Install rubber trim to the concave section of the bracket.



5. Attach the bracket to bottom of Two Brothers exhaust clamps.



6. Run wires up from fender along left side and use zip ties and zip tie tabs to secure away from muffler.
7. You will need to cut the OEM connectors from your fender that will not be used and splice them into the harness supplied, use the wiring diagram below:

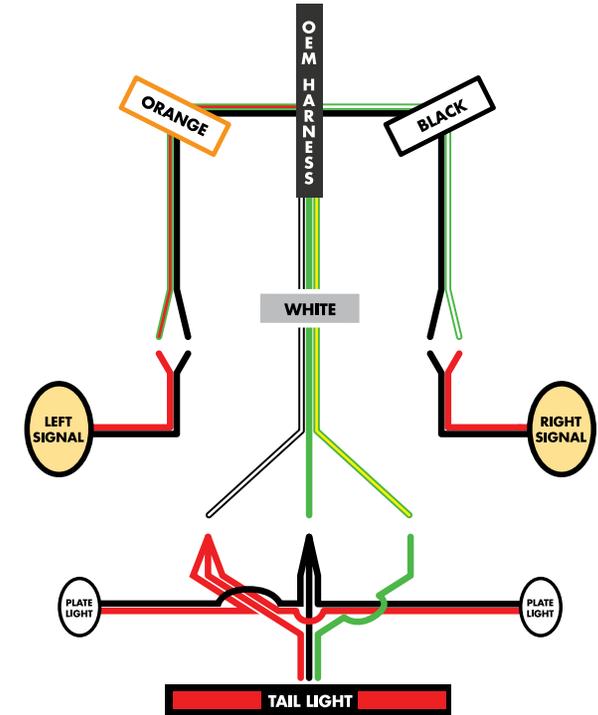

* If the plate lights are to be used they will need to have the connectors cut off and joined in to the red and the black tail light wires before they plug into the white connector.

* Heat the connectors supplied with a heat gun or blow dryer to make them a water tight seal.

8. Check to be sure all the lights work properly and all wires are away from the muffler.